


T9K5 Differential Pressure Torque Chart

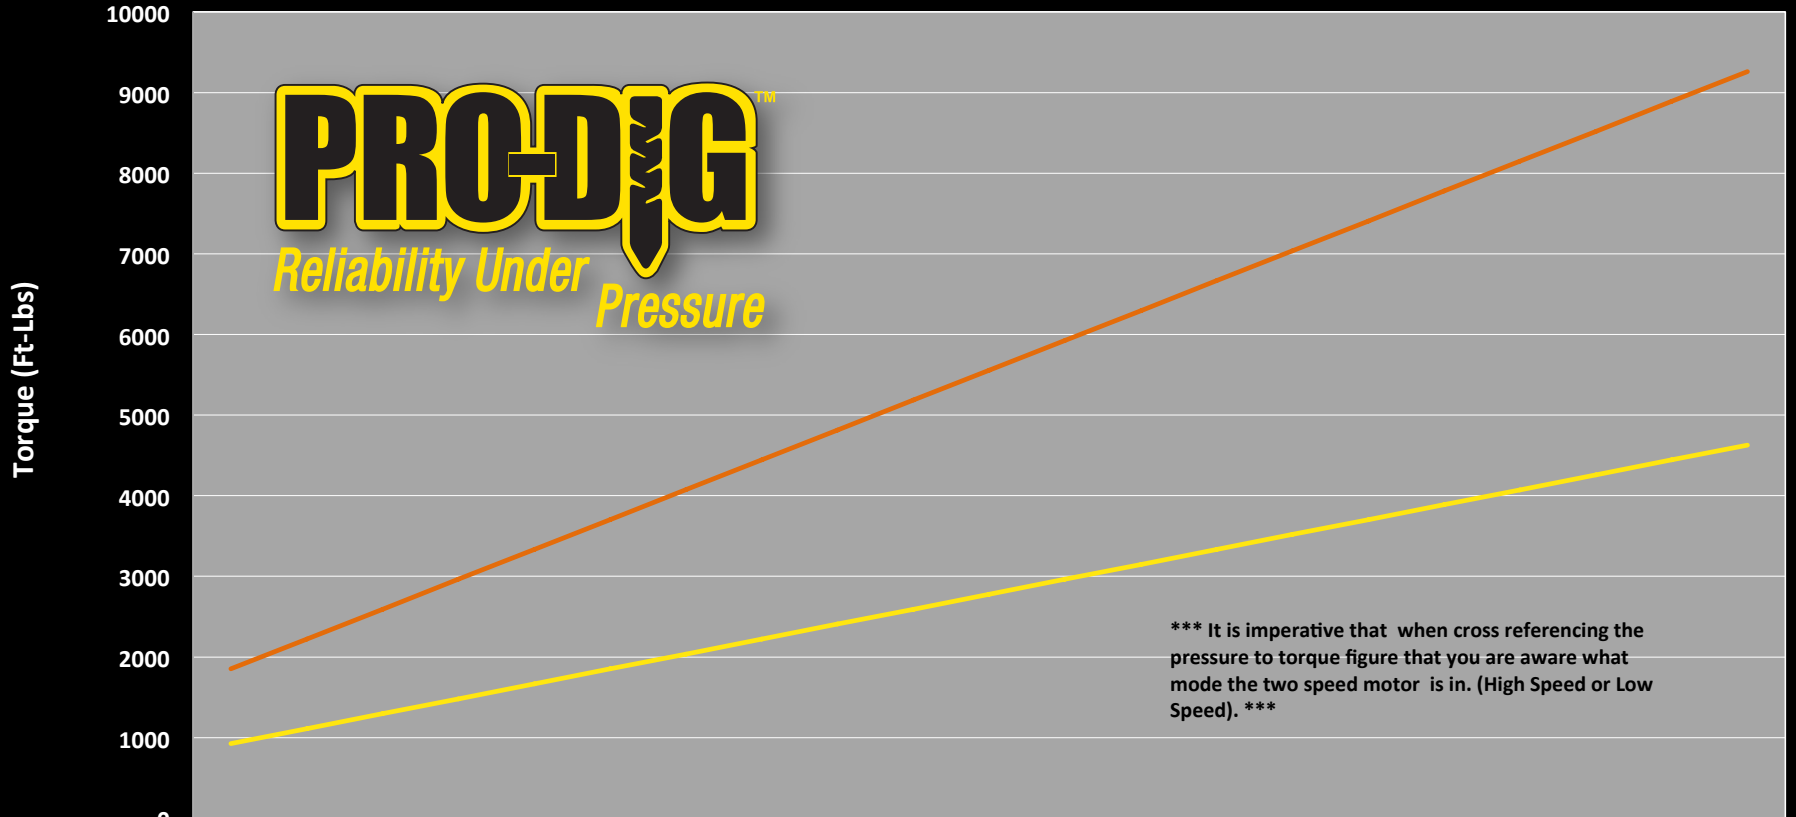

*** It is imperative that when cross referencing the pressure to torque figure that you are aware what mode the two speed motor is in. (High Speed or Low Speed). ***

Pressure (PSI)	500	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800	1900	2000	2100	2200	2300	2400	2500
Hi Spd/Lo Tqe (Ft-Lbs)	926	1111	1296	1481	1666	1852	2037	2222	2407	2592	2777	2963	3148	3333	3518	3703	3888	4074	4259	4444	4629
Lo Spd/Hi Tqe (Ft-Lbs)	1852	2222	2593	2963	3333	3704	4074	4444	4815	5185	5555	5926	6296	6666	7037	7407	7778	8148	8518	8889	9259