



# DDT40K Differential Pressure Torque Chart

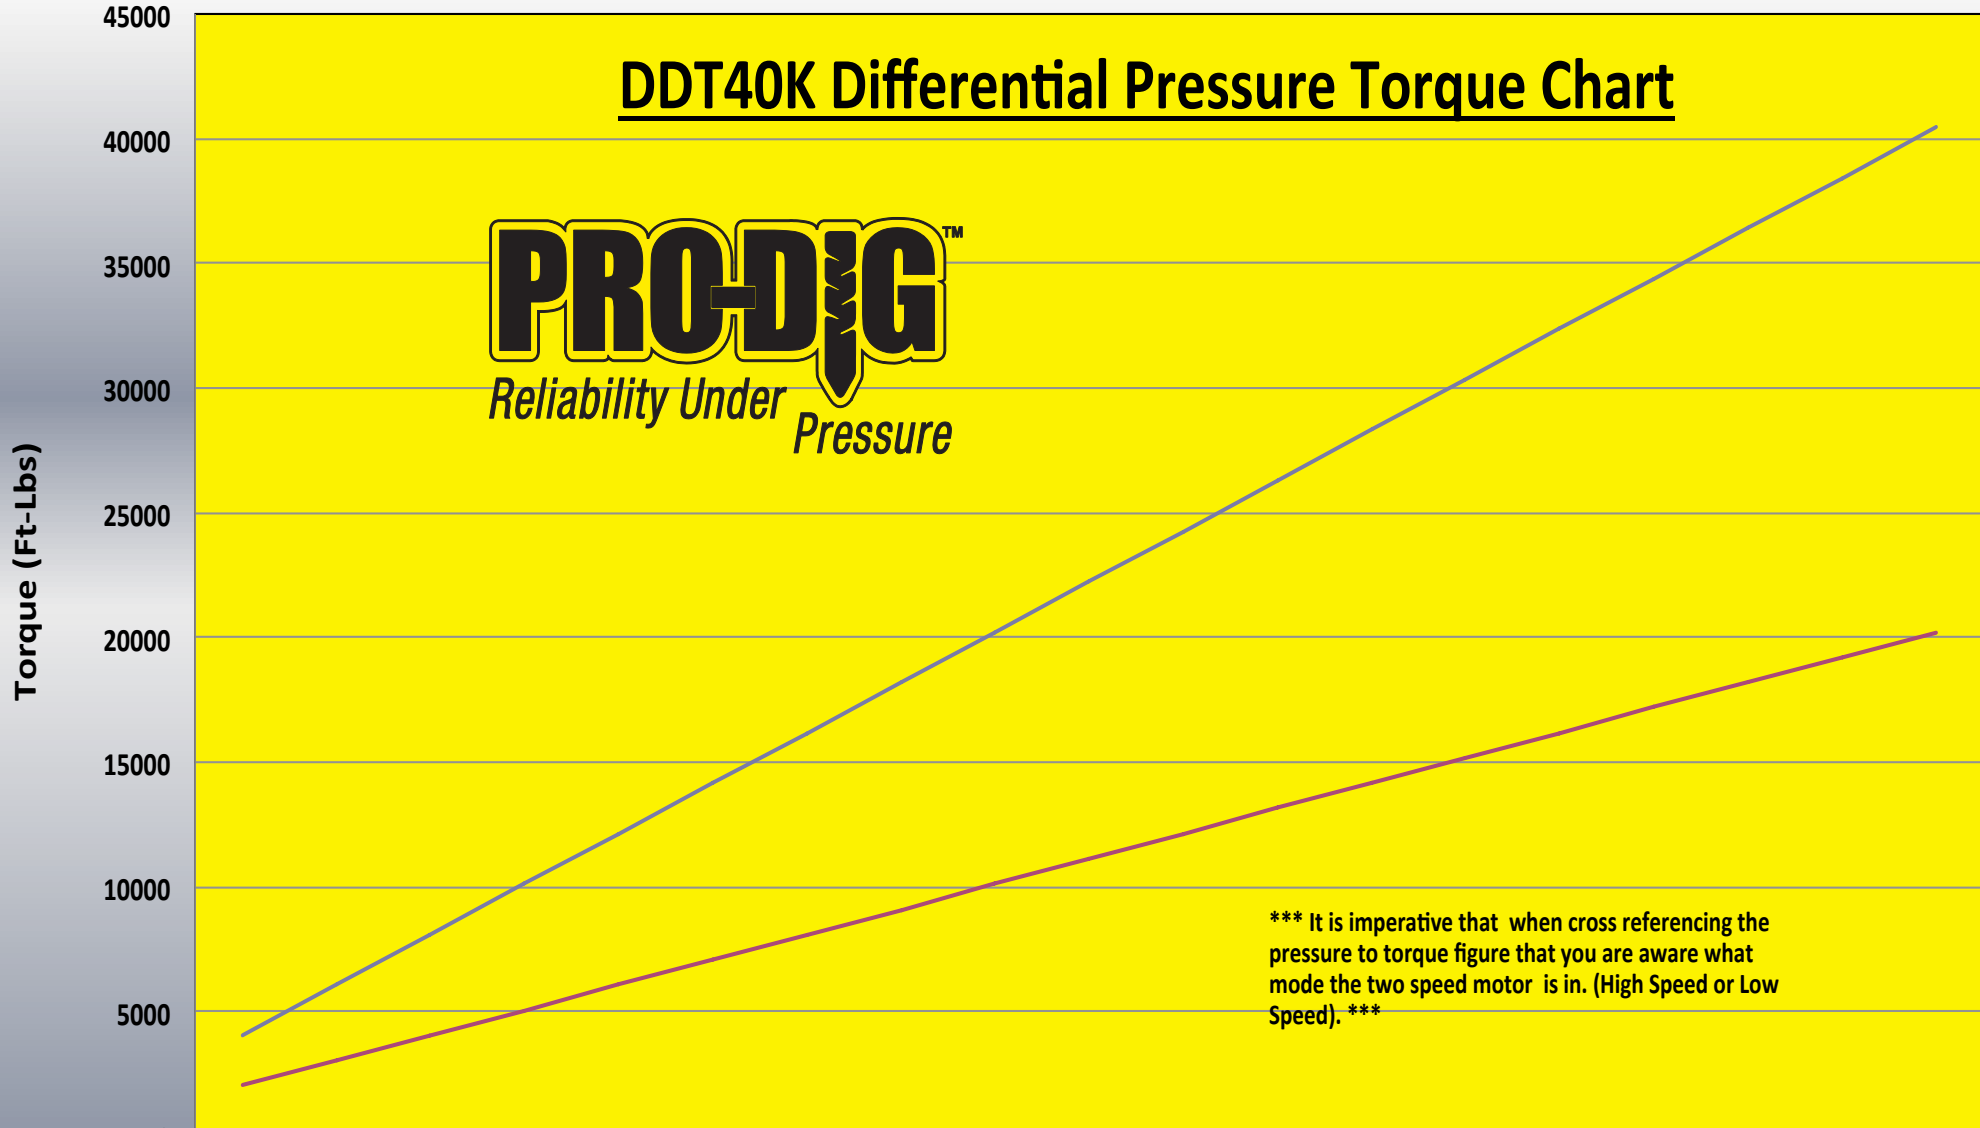

\*\*\* It is imperative that when cross referencing the pressure to torque figure that you are aware what mode the two speed motor is in. (High Speed or Low Speed). \*\*\*

Pressure (PSI)	500	750	1000	1250	1500	1750	2000	2250	2500	2750	3000	3250	3500	3750	4000	4250	4500	4750	5000
Hi Spd/Lo Tqe (Ft-Lbs)	2022	3033	4045	5056	6067	7078	8089	9100	10111	11123	12134	13145	14156	15167	16178	17189	18201	19212	20223
Lo Spd/Hi Tqe (Ft-Lbs)	4045	6067	8089	10111	12134	14156	16178	18201	20223	22245	24267	26290	28312	30334	32357	34379	36401	38423	40446

# DDT40K Differential Pressure Torque Chart

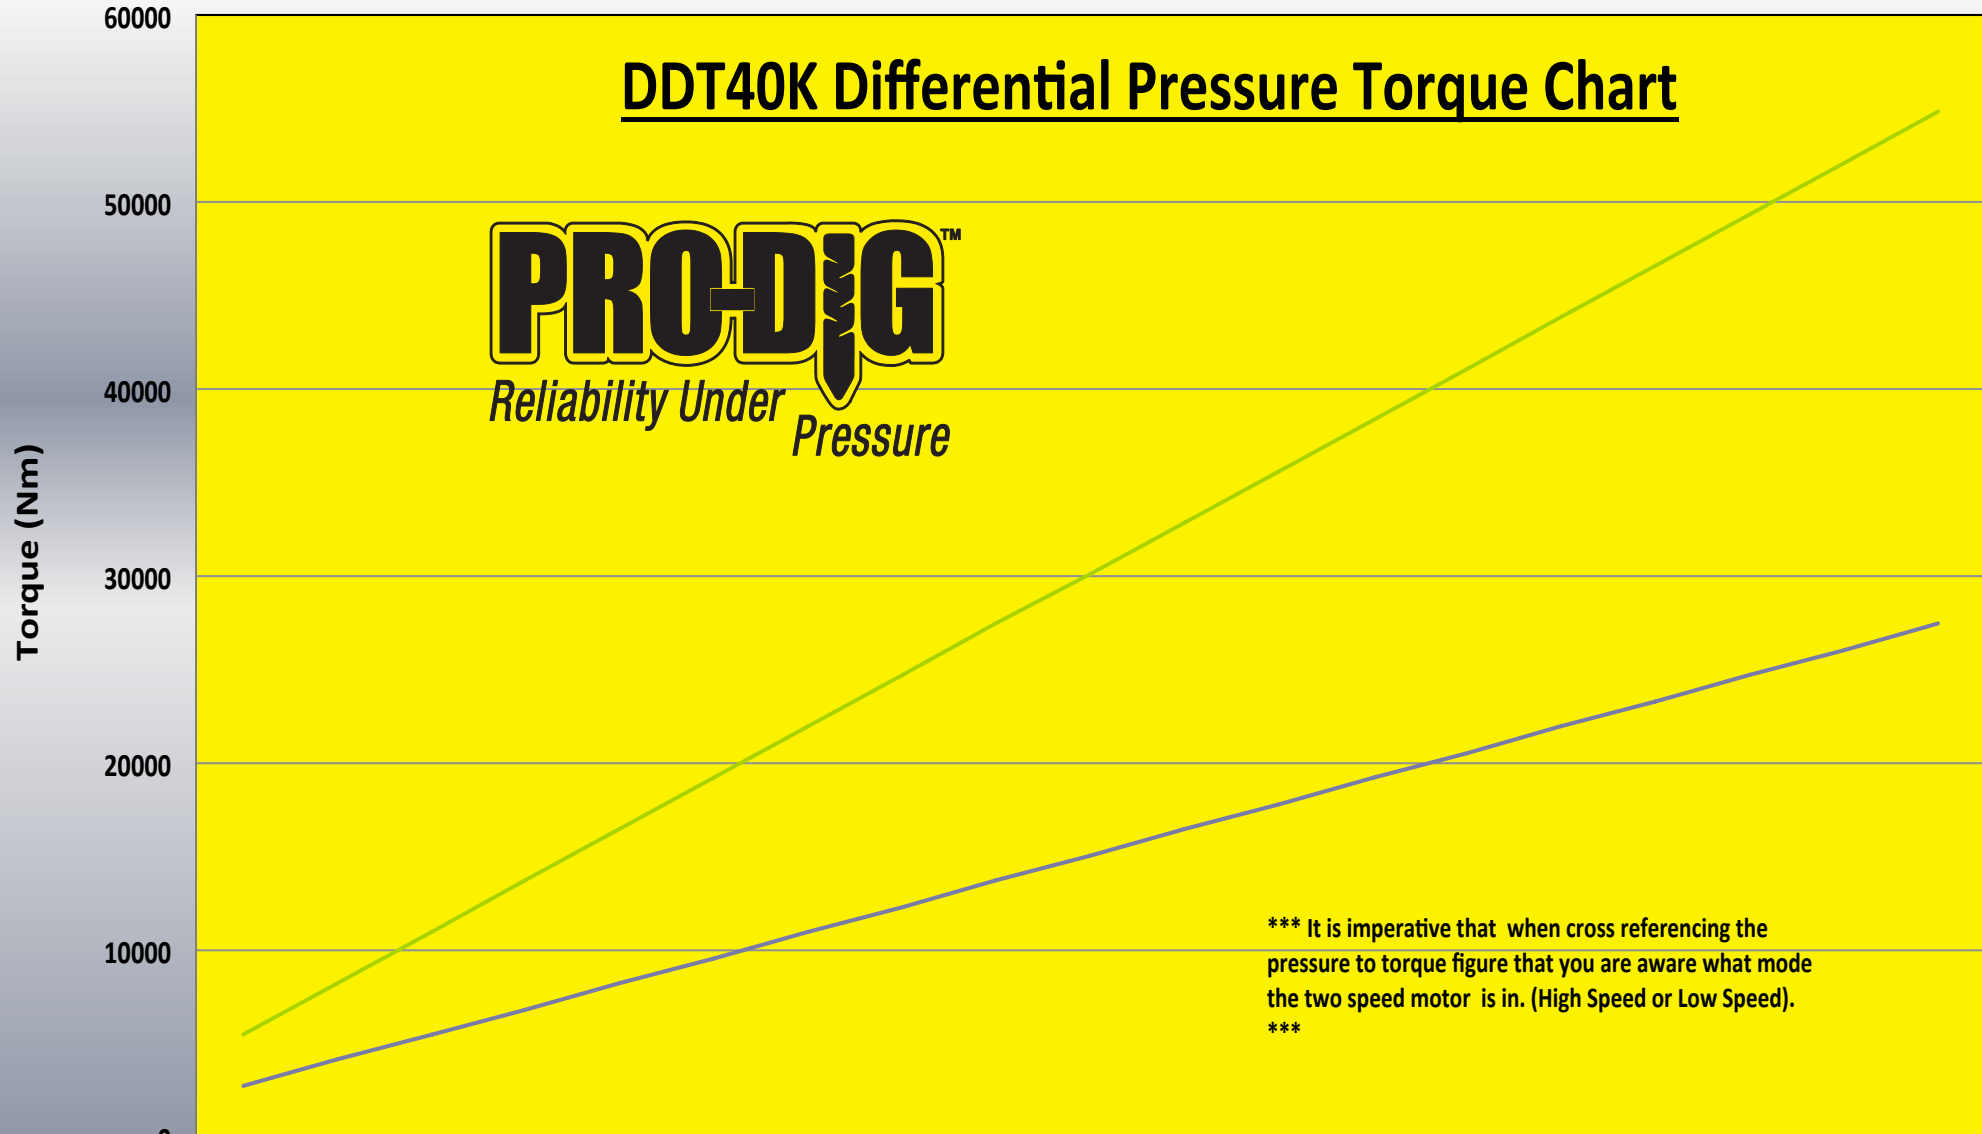

\*\*\* It is imperative that when cross referencing the pressure to torque figure that you are aware what mode the two speed motor is in. (High Speed or Low Speed).  
\*\*\*

Pressure (Bar) <sup>0</sup>	34	52	69	86	103	121	138	155	172	189	207	224	241	258	276	293	310	327	345
Hi Spd/Lo Tqe (Nm)	2742	4113	5484	6855	8226	9596	10967	12338	13709	15080	16451	17822	19193	20564	21935	23306	24677	26048	27419
Lo Spd/Hi Tqe (Nm)	5484	8226	10967	13709	16451	19193	21935	24677	27419	30160	32902	35644	38386	41128	43870	46612	49353	52095	54837