



DDT90K Differential Pressure Torque Chart

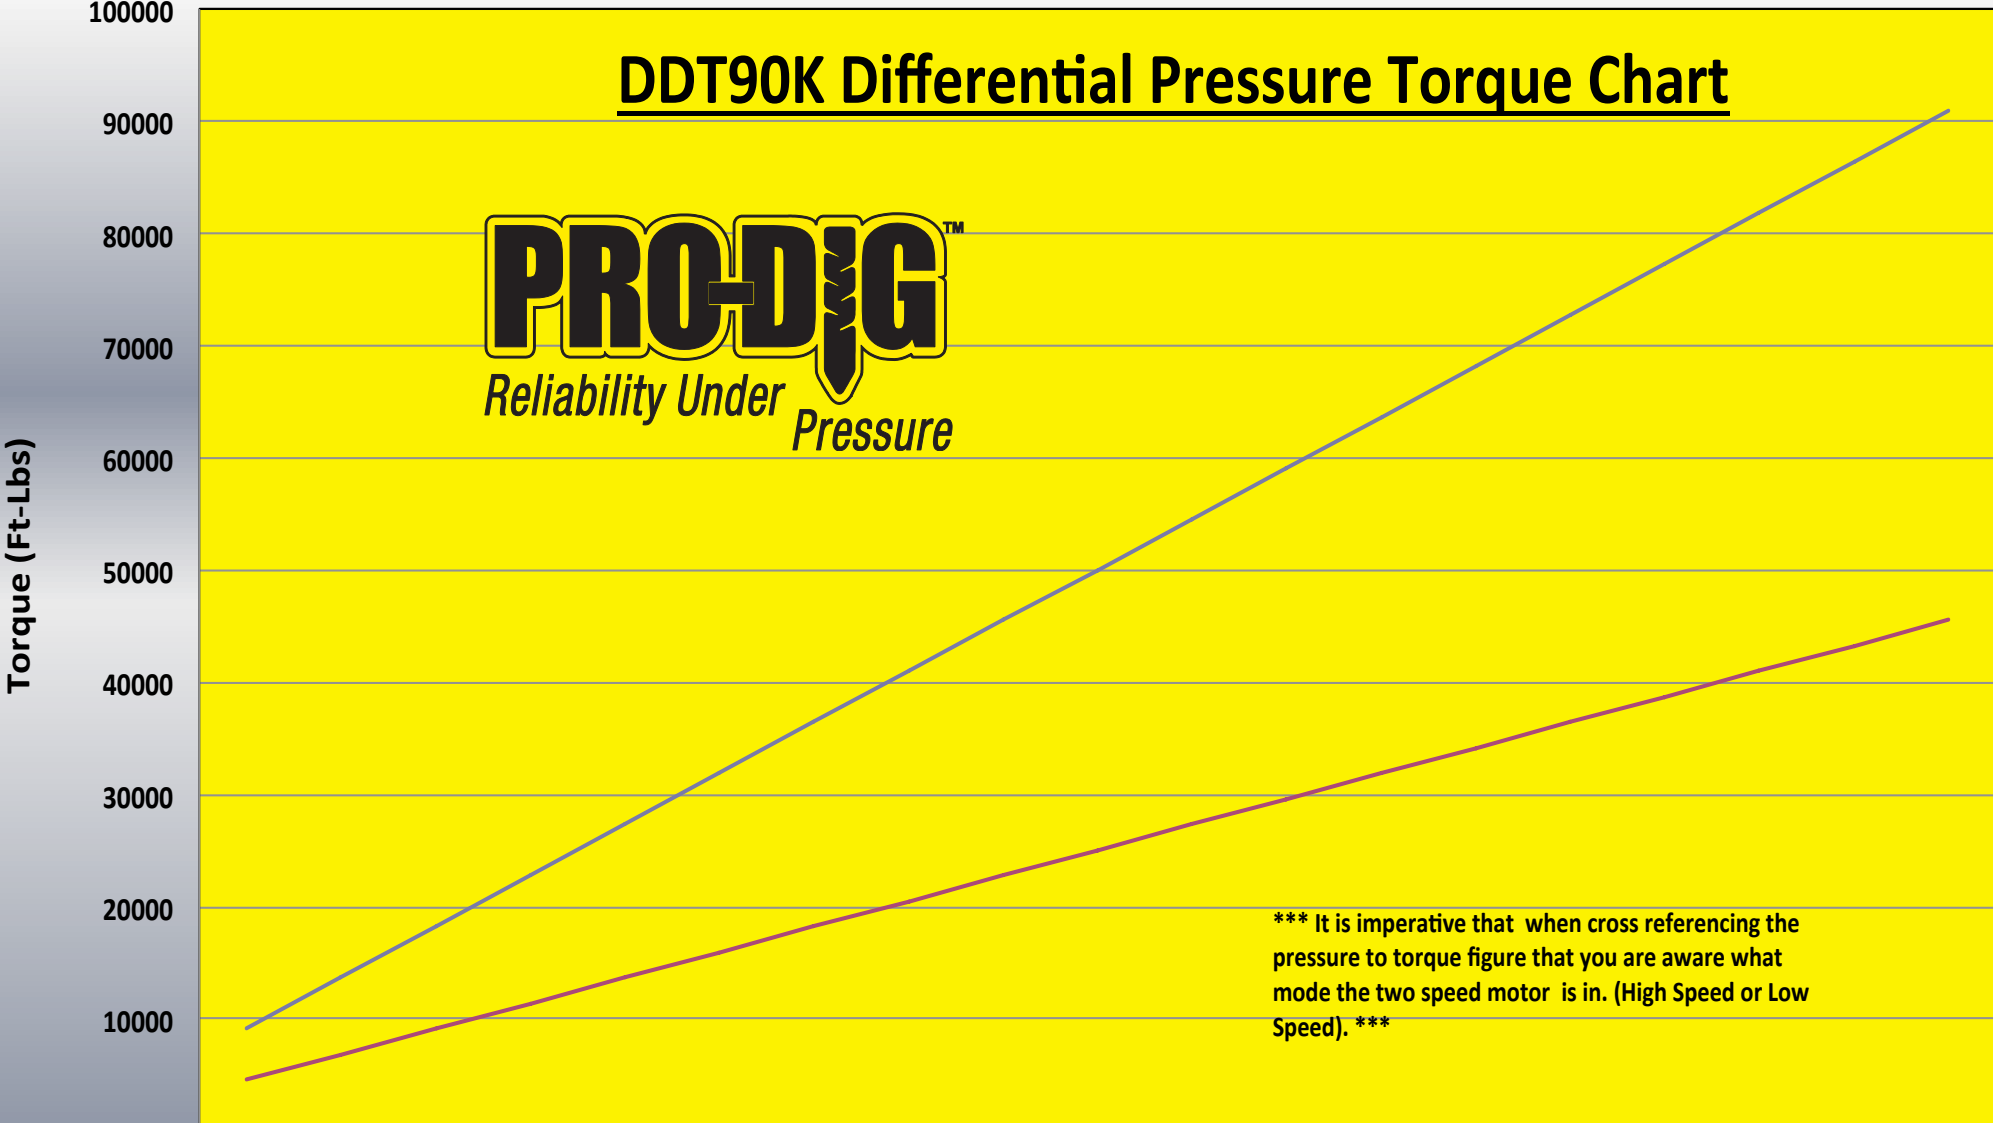

*** It is imperative that when cross referencing the pressure to torque figure that you are aware what mode the two speed motor is in. (High Speed or Low Speed). ***

Pressure (PSI)	500	750	1000	1250	1500	1750	2000	2250	2500	2750	3000	3250	3500	3750	4000	4250	4500	4750	5000
Hi Spd/Lo Tqe (Ft-Lbs)	4550	6825	9100	11375	13650	15926	18201	20476	22751	25026	27301	29576	31851	34126	36401	38676	40951	43226	45501
Lo Spd/Hi Tqe (Ft-Lbs)	9100	13650	18201	22751	27301	31851	36401	40951	45501	50052	54602	59152	63702	68252	72802	77352	81903	86453	91003

DDT90K Differential Pressure Torque Chart

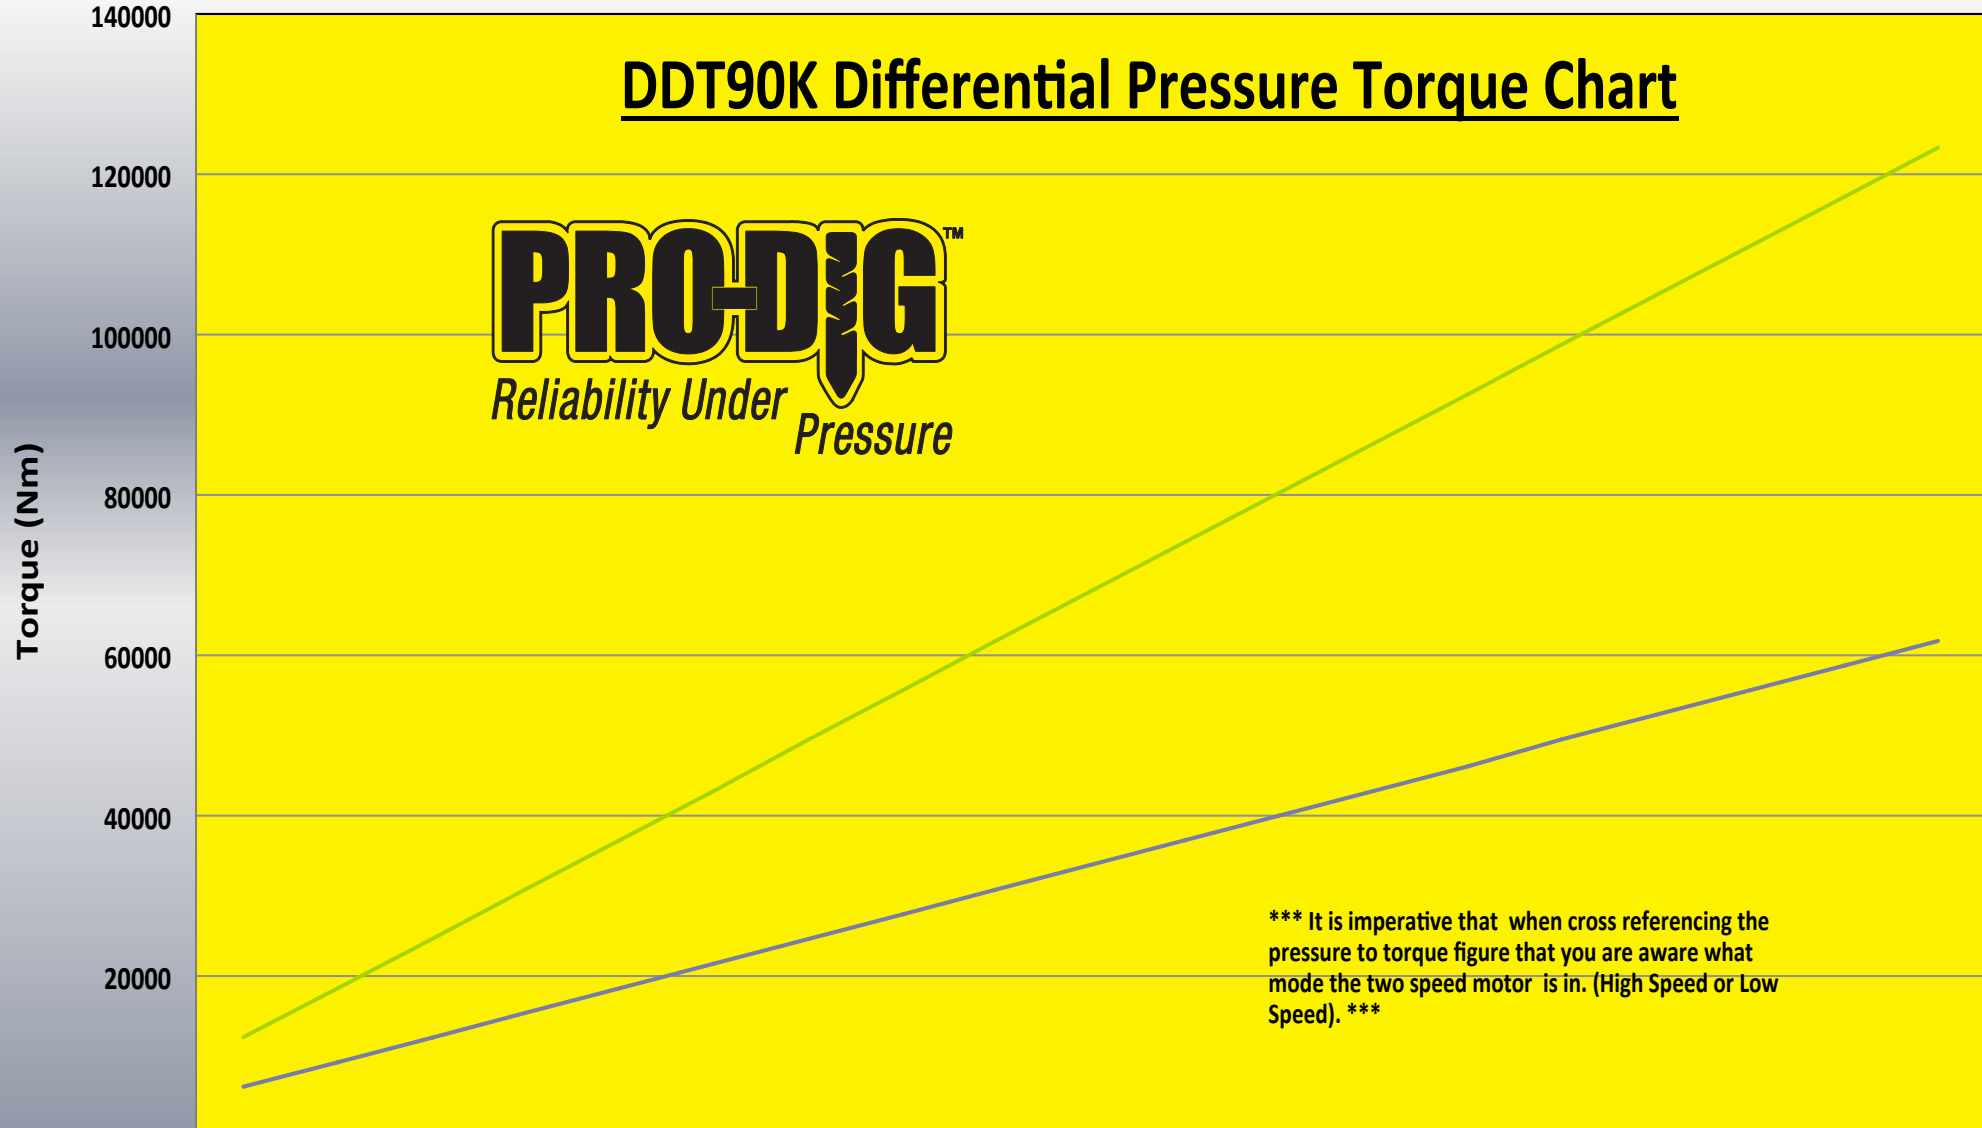

*** It is imperative that when cross referencing the pressure to torque figure that you are aware what mode the two speed motor is in. (High Speed or Low Speed). ***

Pressure (Bar)	34	52	69	86	103	121	138	155	172	189	207	224	241	258	276	293	310	327	345
Hi Spd/Lo Tqe (Nm)	6169	9254	12338	15423	18508	21592	24677	27761	30846	33930	37015	40100	43184	46269	49353	52438	55523	58607	61692
Lo Spd/Hi Tqe (Nm)	12338	18508	24677	30846	37015	43184	49353	55523	61692	67861	74030	80199	86368	92538	98707	104876	111045	117214	123384