


# DDT25K Differential Pressure Torque Chart

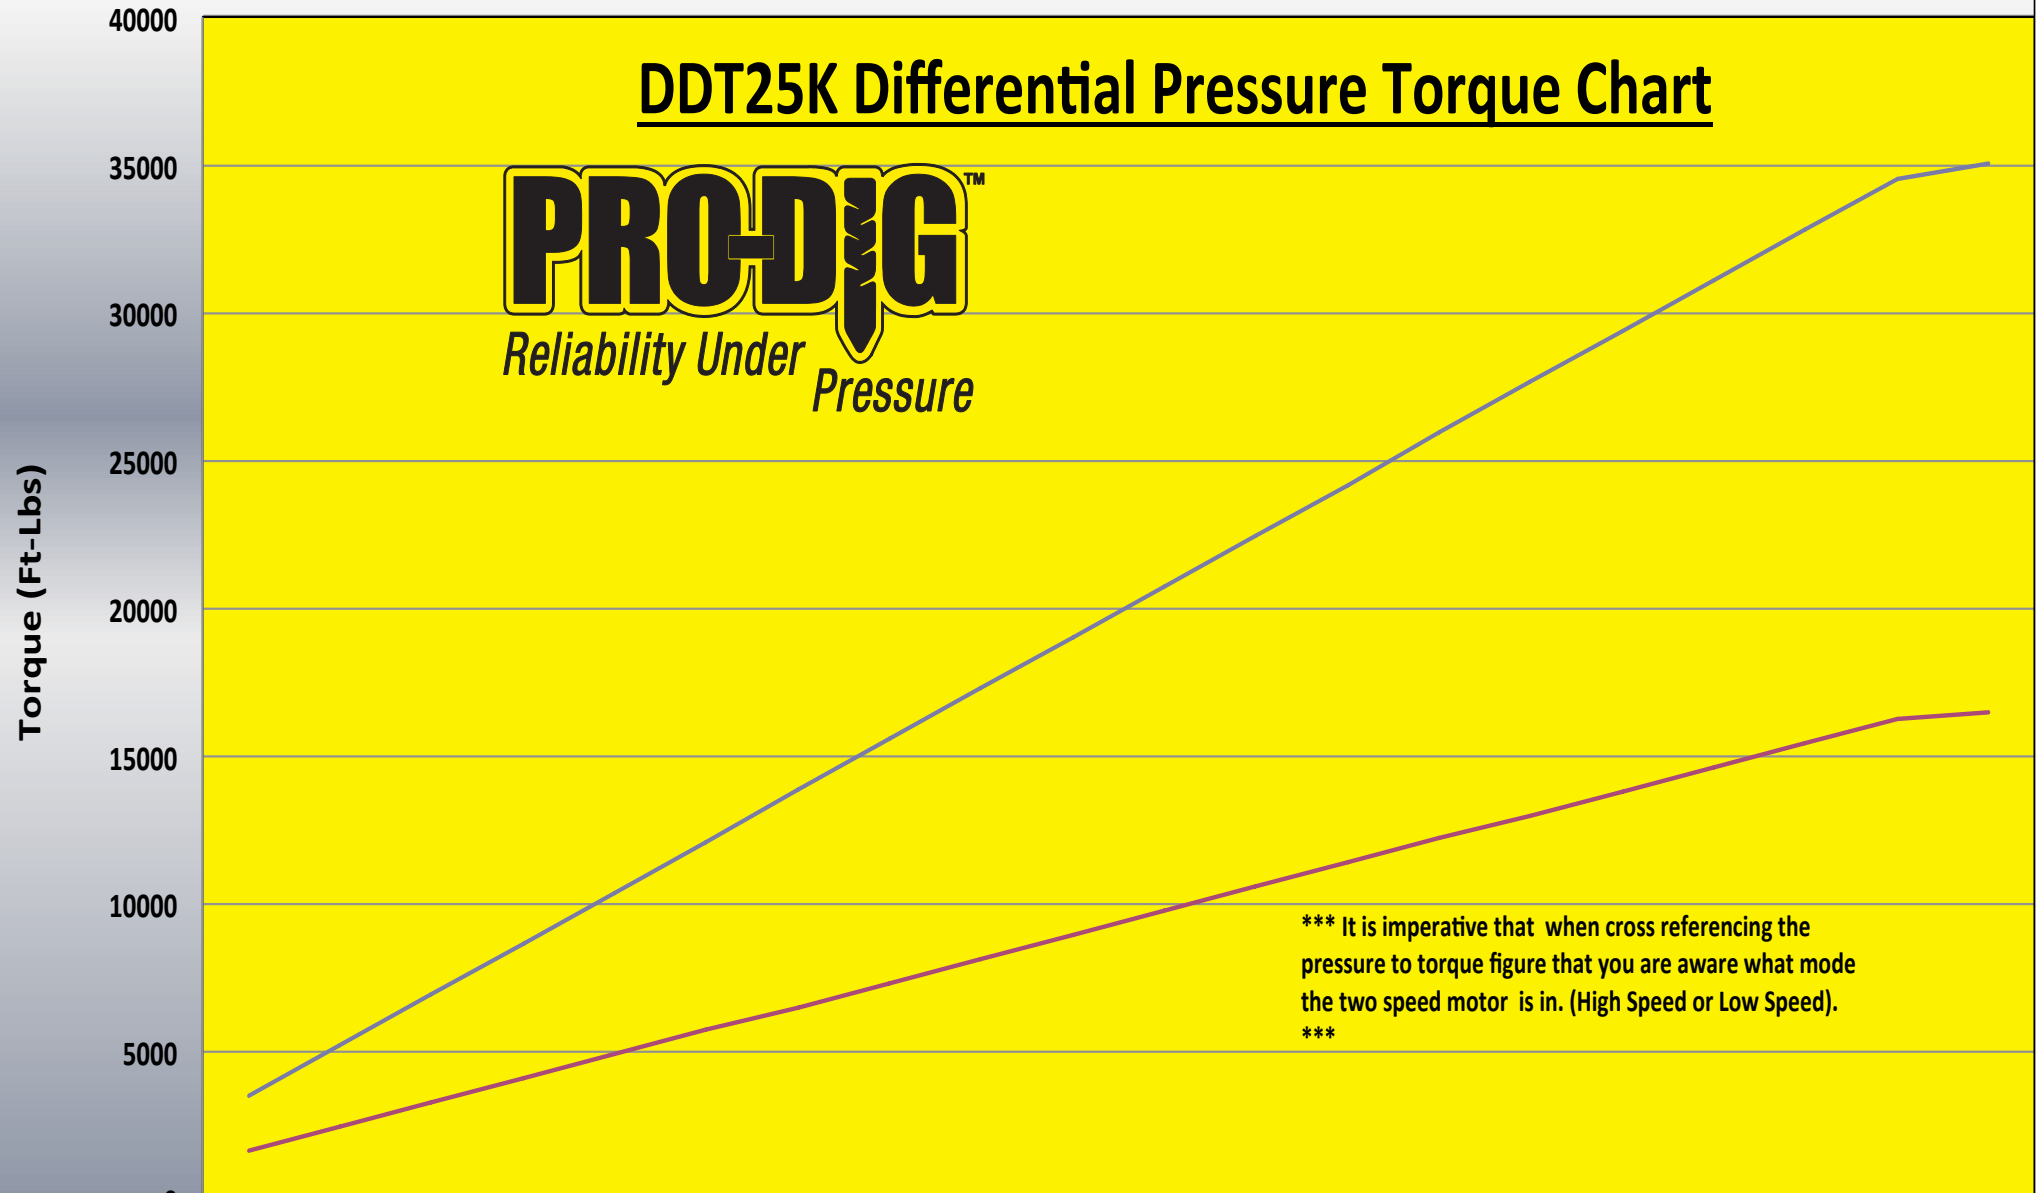

\*\*\* It is imperative that when cross referencing the pressure to torque figure that you are aware what mode the two speed motor is in. (High Speed or Low Speed).  
\*\*\*

Pressure (PSI)	34	52	69	86	103	121	138	155	172	189	207	224	241	258	276	293	310	327	345	350
Hi Spd/Lo Tqe (Nm)	1624	2436	3247	4059	4871	5683	6495	7307	8119	8930	9742	10554	11366	12178	12990	13802	14614	15425	16237	16484
Lo Spd/Hi Tqe (Nm)	3455	5182	6909	8637	10364	12092	13819	15546	17274	19001	20728	22456	24183	25911	27638	29365	31093	32820	34547	35073

# DDT25K Differential Pressure Torque Chart



Torque (Ft-Lbs)

30000

25000

20000

15000

10000

5000

0

\*\*\* It is imperative that when cross referencing the pressure to torque figure that you are aware what mode the two speed motor is in. (High Speed or Low Speed). \*\*\*

Pressure (PSI)

	500	750	1000	1250	1500	1750	2000	2250	2500	2750	3000	3250	3500	3750	4000	4250	4500	4750	5000
Hi Spd/Lo Tqe (Ft-Lbs)	1198	1796	2395	2994	3593	4192	4790	5389	5988	6587	7186	7784	8383	8982	9581	10180	10778	11377	11976
Lo Spd/Hi Tqe (Ft-Lbs)	2548	3822	5096	6370	7644	8918	10192	11466	12740	14014	15288	16563	17837	19111	20385	21659	22933	24207	25481