


T30K Differential Pressure Torque Chart

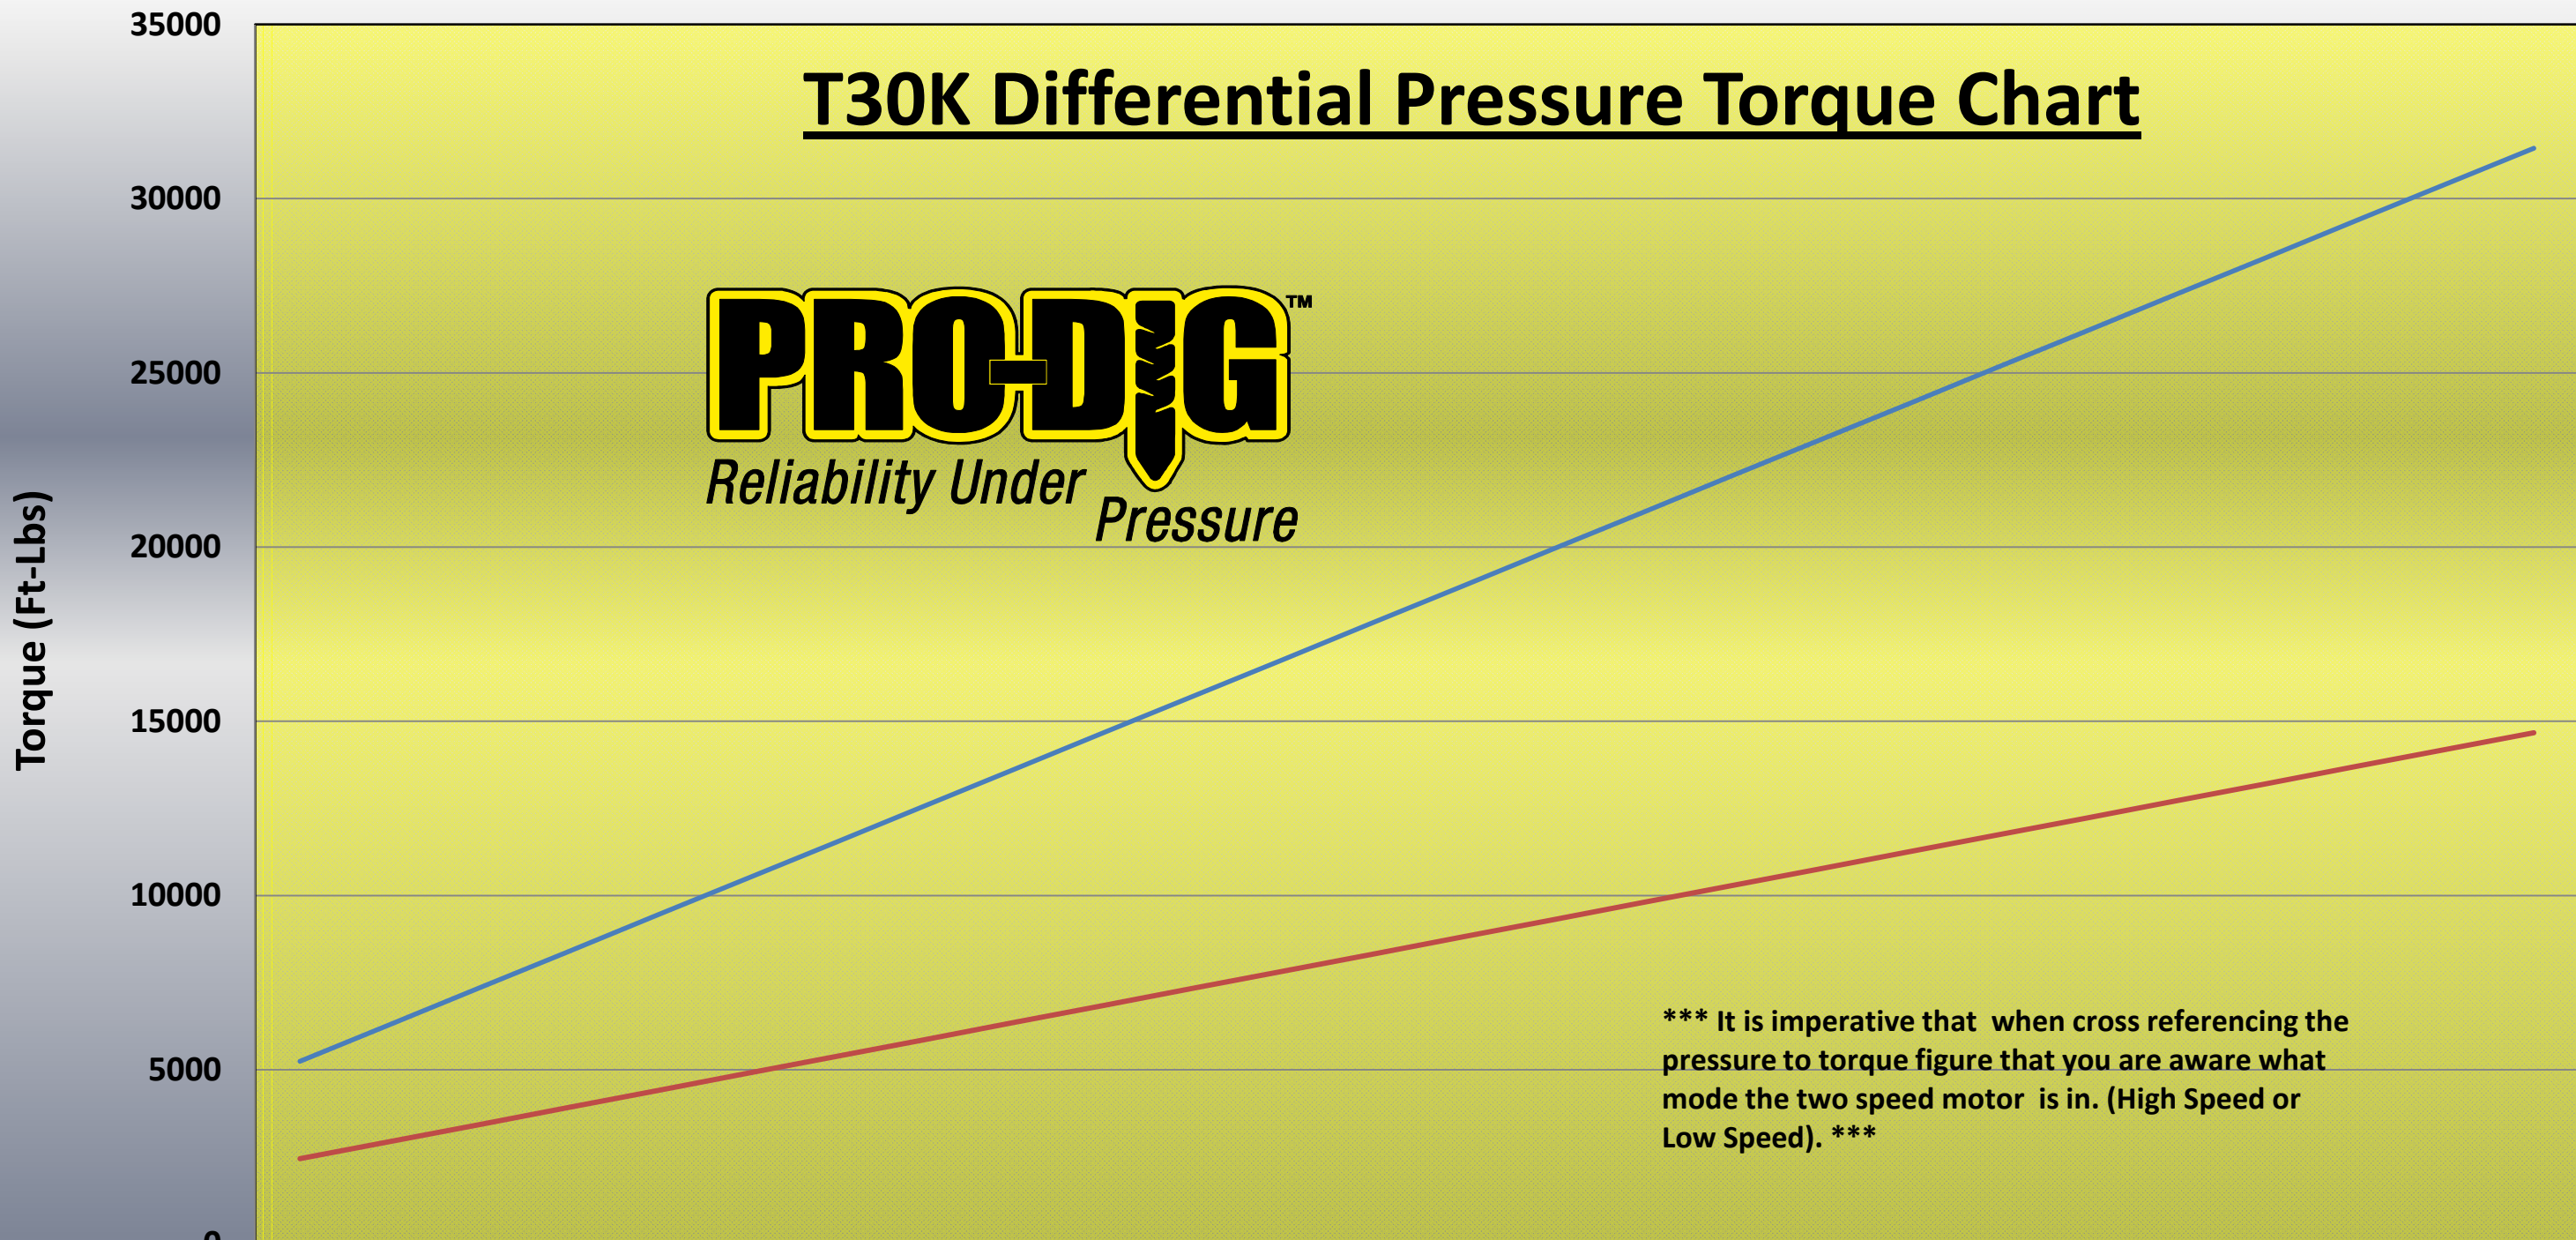

*** It is imperative that when cross referencing the pressure to torque figure that you are aware what mode the two speed motor is in. (High Speed or Low Speed). ***

Pressure (PSI)	500	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800	1900	2000	2100	2200	2300	2400	2500	2600	2700	2800	2900	3000
Hi Spd/Lo Tqe (Ft-Lbs)	2446	2935	3424	3913	4402	4891	5380	5869	6358	6847	7337	7826	8315	8804	9293	9782	10271	10760	11249	11738	12228	12717	13206	13695	14184	14673
Lo Spd/Hi Tqe (Ft-Lbs)	5241	6289	7337	8386	9434	10482	11530	12578	13627	14675	15723	16771	17819	18868	19916	20964	22012	23060	24109	25157	26205	27253	28301	29350	30398	31446