


# T5K5 Differential Pressure Torque Chart

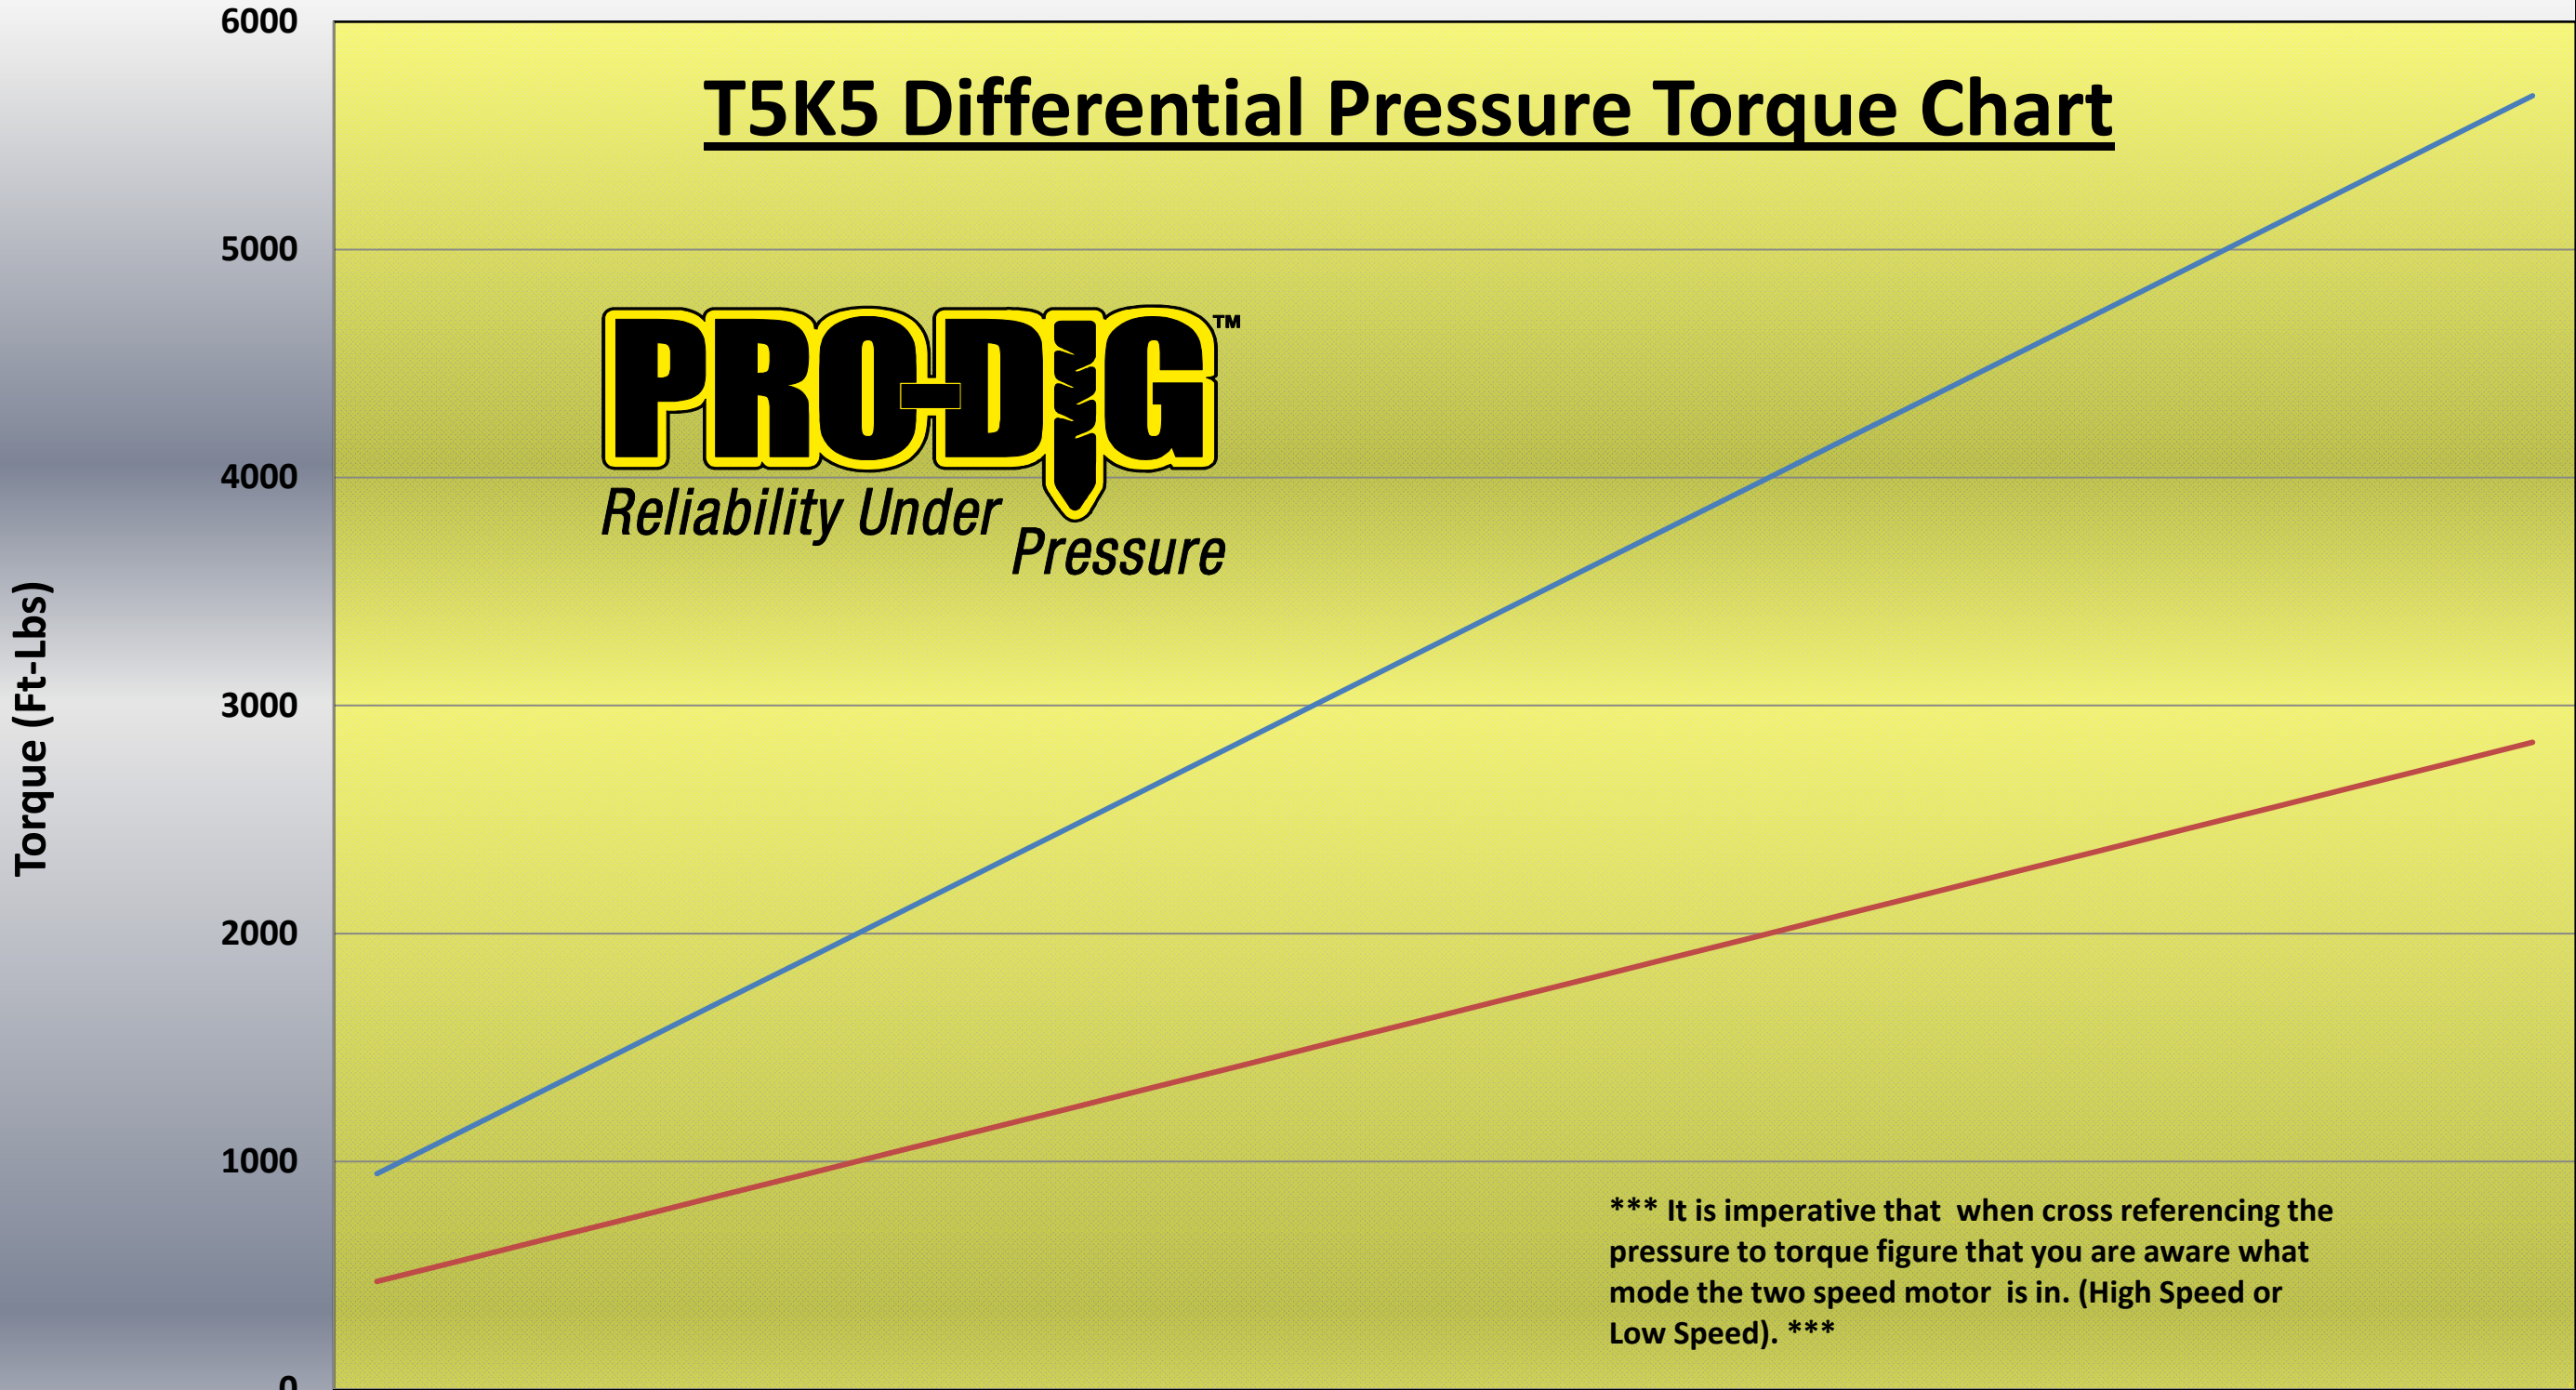

\*\*\* It is imperative that when cross referencing the pressure to torque figure that you are aware what mode the two speed motor is in. (High Speed or Low Speed). \*\*\*

	0	500	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800	1900	2000	2100	2200	2300	2400	2500	2600	2700	2800	2900	3000
— High Speed/Low Torque (Ft-Lbs)		473	568	662	757	851	946	1041	1135	1230	1325	1419	1514	1608	1703	1798	1892	1987	2081	2176	2271	2365	2460	2554	2649	2744	2838
— Low Speed/High Torque (Ft-Lbs)		946	1135	1324	1513	1702	1892	2081	2270	2459	2648	2837	3027	3216	3405	3594	3783	3972	4162	4351	4540	4729	4918	5107	5296	5486	5675