


T20K Differential Pressure Torque Chart

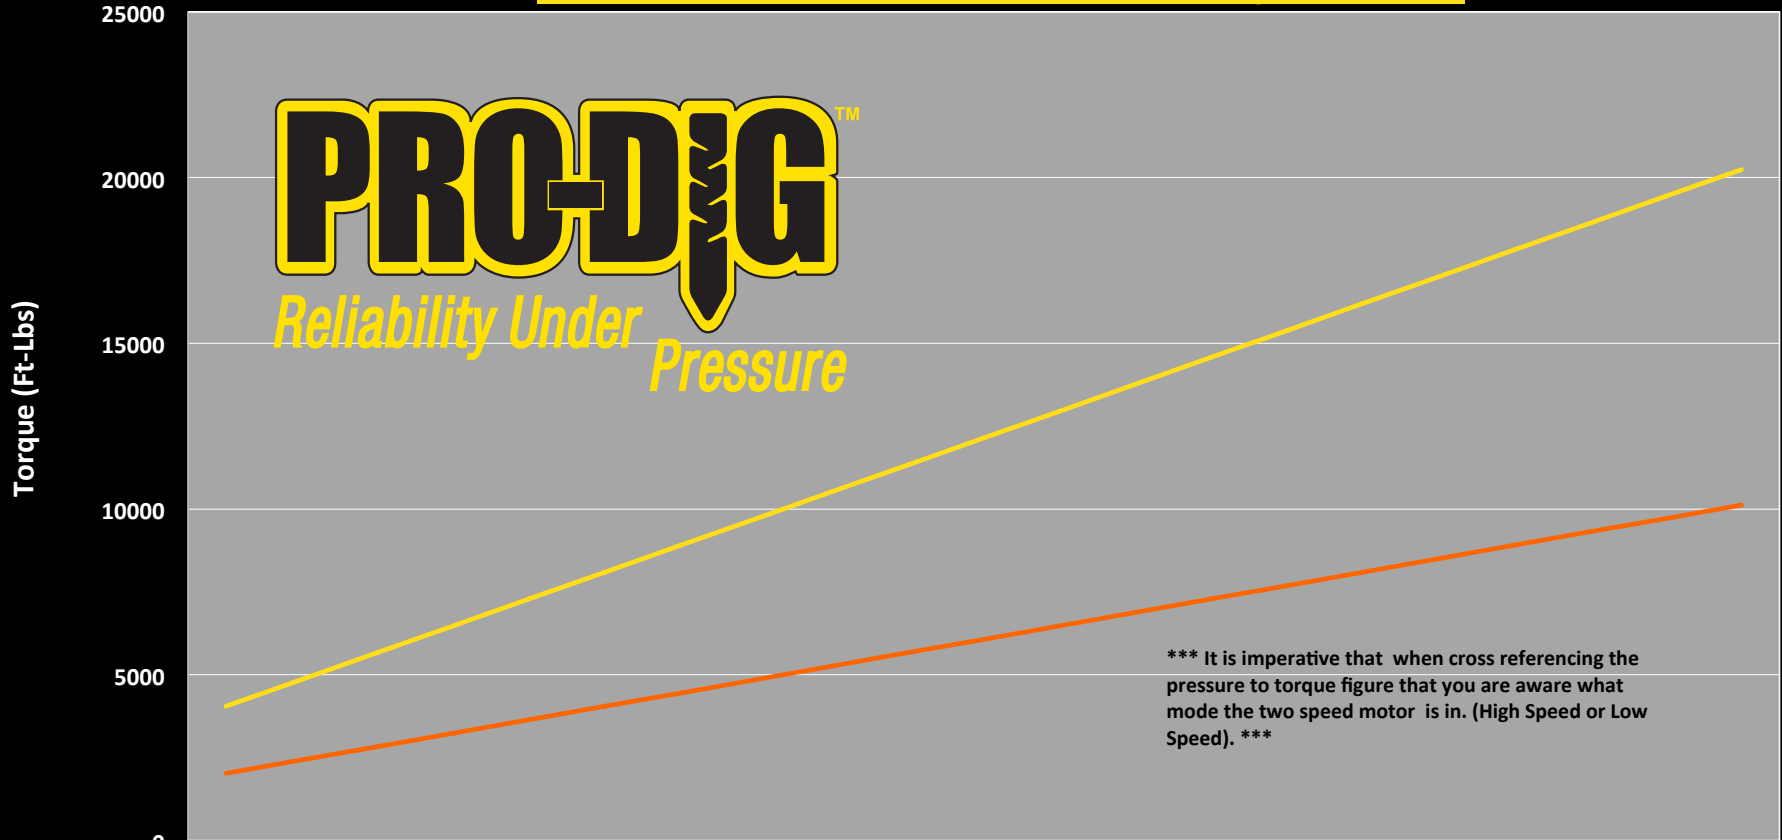

*** It is imperative that when cross referencing the pressure to torque figure that you are aware what mode the two speed motor is in. (High Speed or Low Speed). ***

Pressure (PSI)	0	500	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800	1900	2000	2100	2200	2300	2400	2500
Hi Spd/Lo Tqe (Ft-Lbs)		2024	2429	2834	3239	3644	4049	4454	4859	5263	5668	6073	6478	6883	7288	7693	8098	8502	8907	9312	9717	10122
Lo Spd/Hi Tqe (Ft-Lbs)		4049	4859	5669	6478	7288	8098	8908	9718	10527	11337	12147	12957	13767	14576	15386	16196	17006	17816	18625	19435	20245