


# DDT75K Differential Pressure Torque Chart



Pressure (PSI)	500	750	1000	1250	1500	1750	2000	2250	2500	2750	3000	3250	3500	3750	4000	4250	4500	4750	5000
Hi Spd/Lo Tqe (Ft-Lbs)	3822	5733	7644	9555	11466	13377	15288	17200	19111	21022	22933	24844	26755	28666	30577	32488	34399	36310	38221
Lo Spd/Hi Tqe (Ft-Lbs)	7644	11466	15288	19111	22933	26755	30577	34399	38221	42043	45865	49688	53510	57332	61154	64976	68798	72620	76442

# DDT75K Differential Pressure Torque Chart

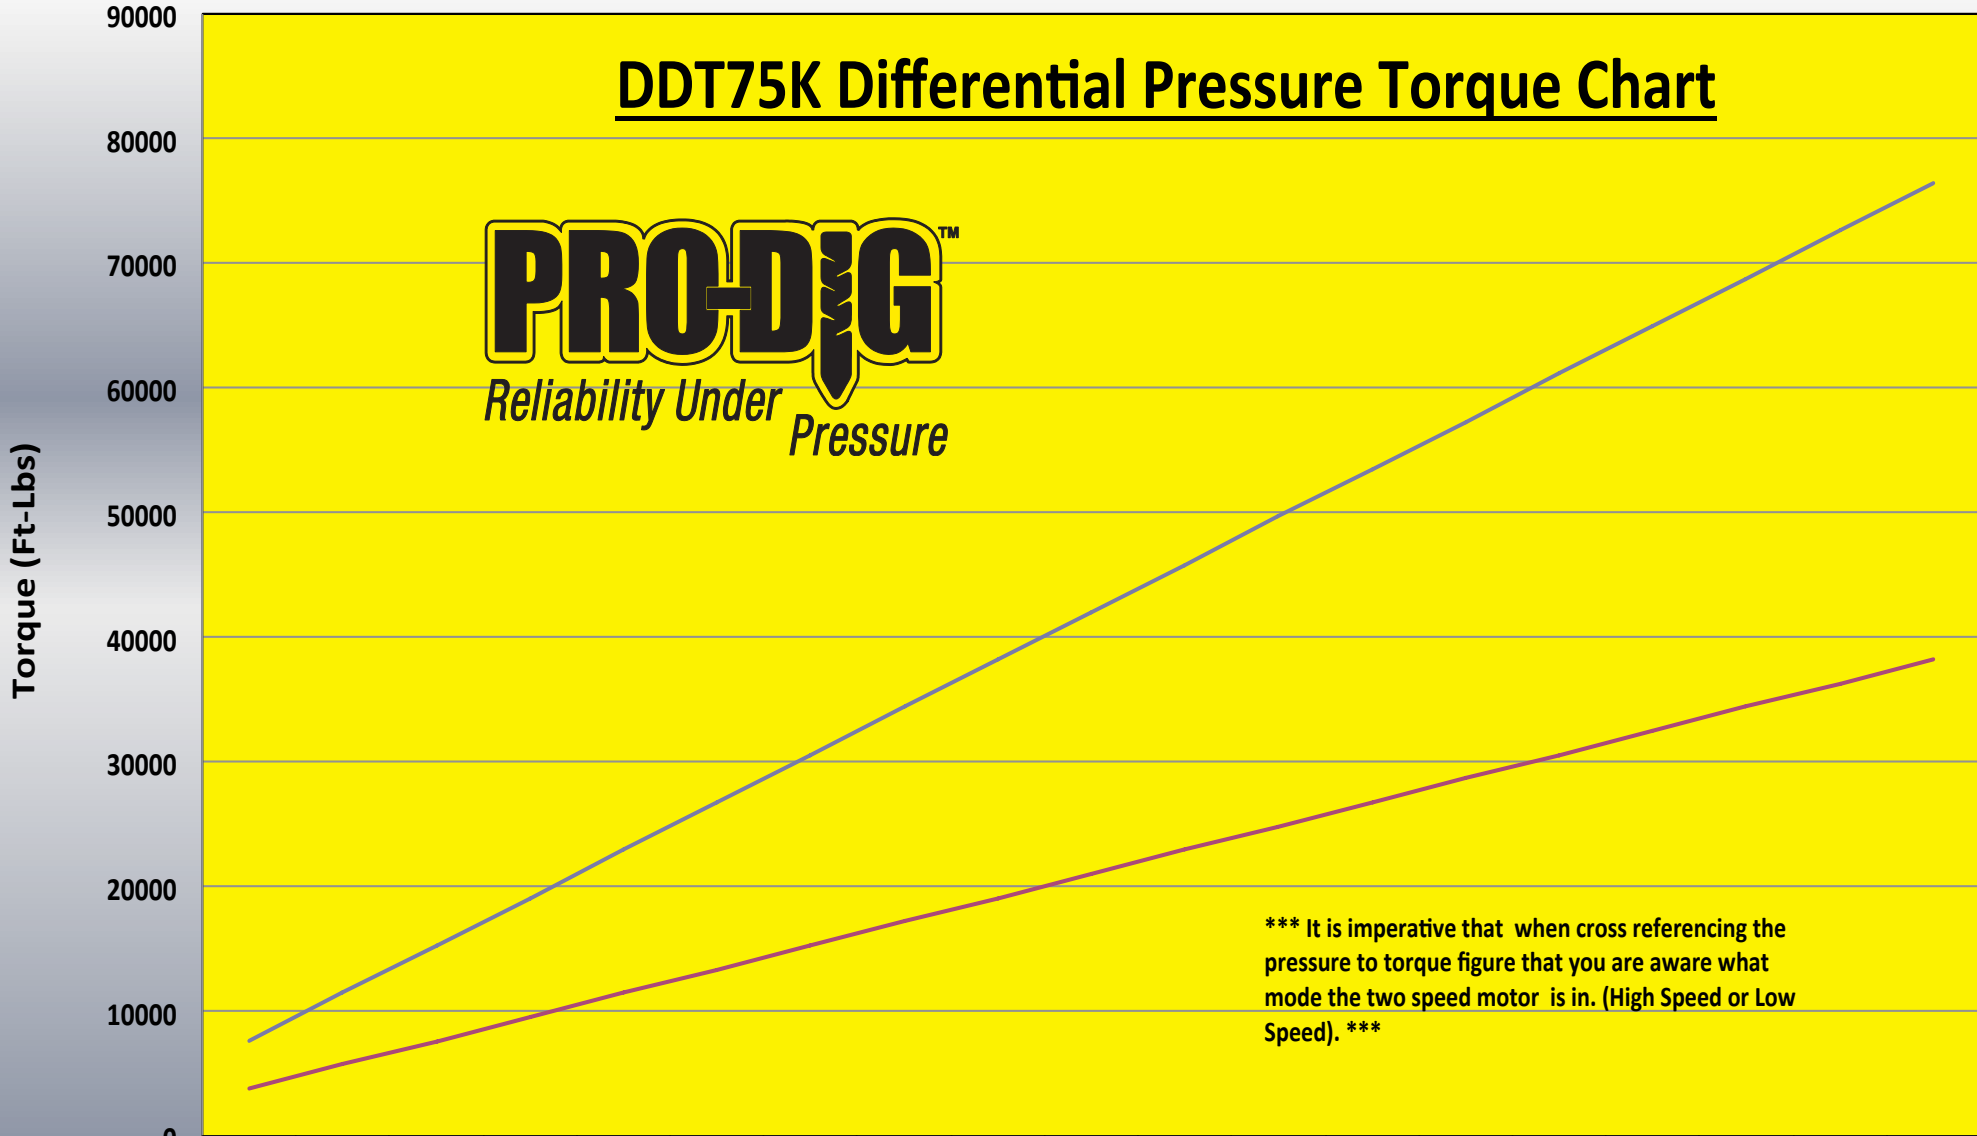

Torque (Nm)

120000  
100000  
80000  
60000  
40000  
20000

\*\*\* It is imperative that when cross referencing the pressure to torque figure that you are aware what mode the two speed motor is in. (High Speed or Low Speed). \*\*\*

Pressure (Bar) <sup>0</sup>	34	52	69	86	103	121	138	155	172	189	207	224	241	258	276	293	310	327	345
Hi Spd/Lo Tqe (Nm)	5182	7773	10364	12955	15546	18137	20728	23319	25911	28502	31093	33684	36275	38866	41457	44048	46639	49230	51821
Lo Spd/Hi Tqe (Nm)	10364	15546	20728	25911	31093	36275	41457	46639	51821	57003	62185	67367	72550	77732	82914	88096	93278	98460	103642